




Proper Needle Insertion into QualiTru™ Septum

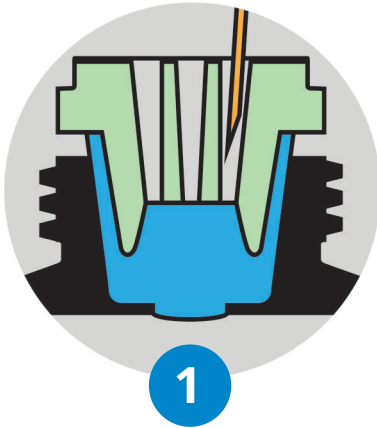


Line the hypodermic needle up with the channel you plan to use.

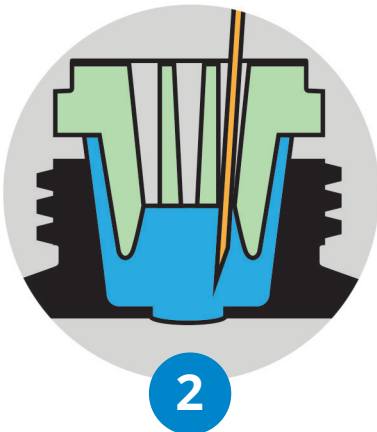


Face the bevel of the needle outward, or toward the outer ring.

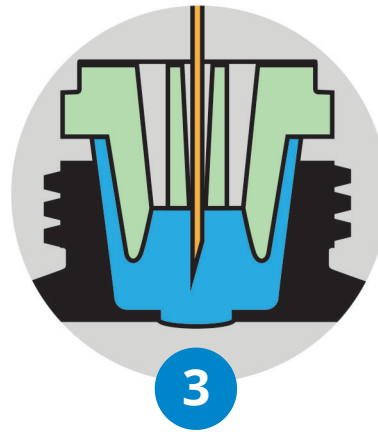

Slowly push the hypodermic needle until you meet resistance.

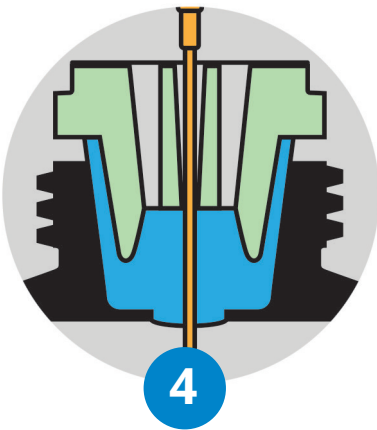


Gently continue through the rubber until you can push no further.

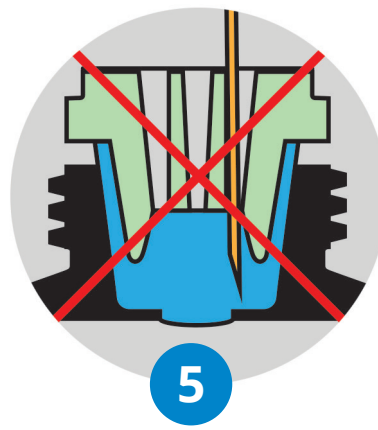


Do not spin or twist on the way through, as you could core the rubber.


Inserción correcta de una aguja en el tabique QualiTru™

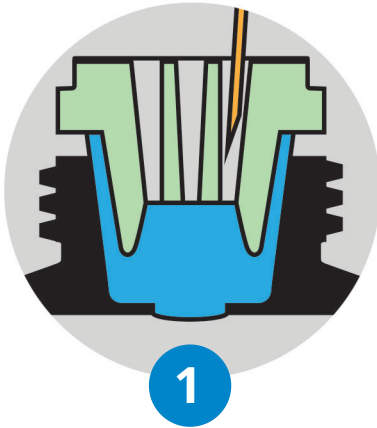


1
Alinee la aguja hipodérmica con el canal que planea usar.

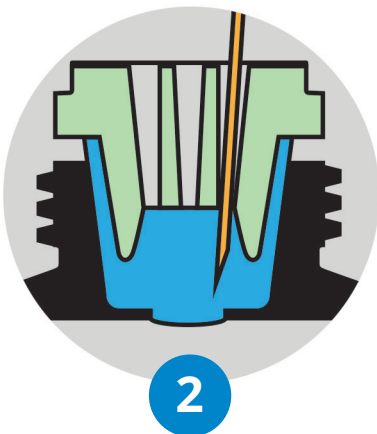


2
Coloque el bisel de la aguja en dirección hacia afuera o hacia el anillo exterior.

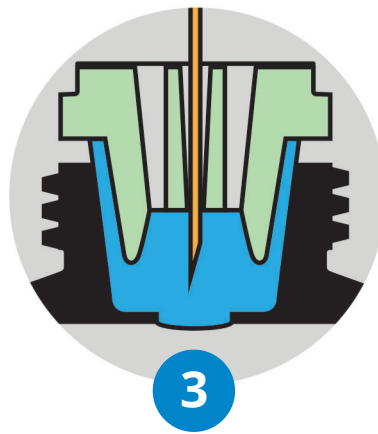

3
Empuje lentamente la aguja hipodérmica hasta encontrar resistencia.

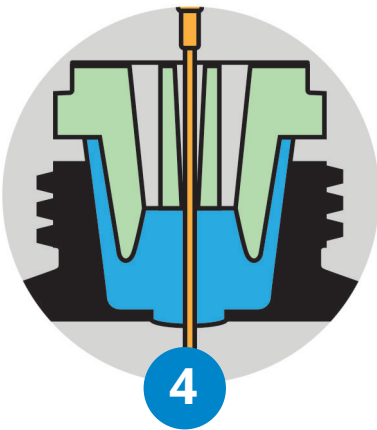

4
Suavemente, continúe empujando a través de la goma hasta que ya no pueda hacerlo.

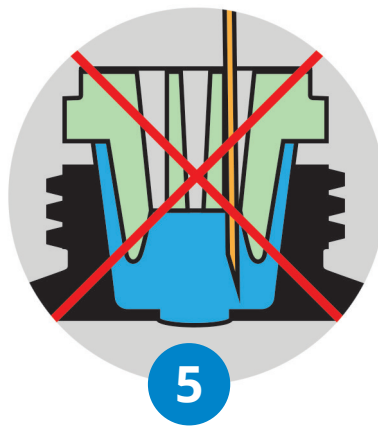

5
No gire ni haga un movimiento de rotación a medida que atraviesa la goma, ya que podría desprenderla.