## PROPER NEEDLE INSERTION INTO QUALITRU® SEPTUM




PN: 110011 TruStream7 Septum




PN: 110021 TruStream7 Septum (High Temp)




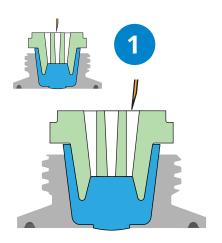


Line the hypodermic needle up with the channel you plan to use.

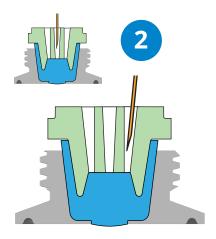

Face the bevel of the needle outward, or toward the outer ring.

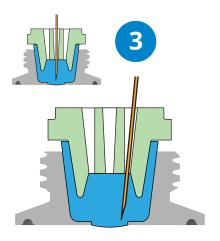

Slowly push the hypodermic needle until you meet resistance.

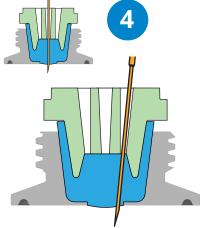

Gently continue through the rubber until you can push no further.



Do not spin or twist on the way through, as you could core the rubber.

