


# TRAINING & SUPPORT: DAIRY PROCESSOR: CHEESE



## APPLICATION SITES

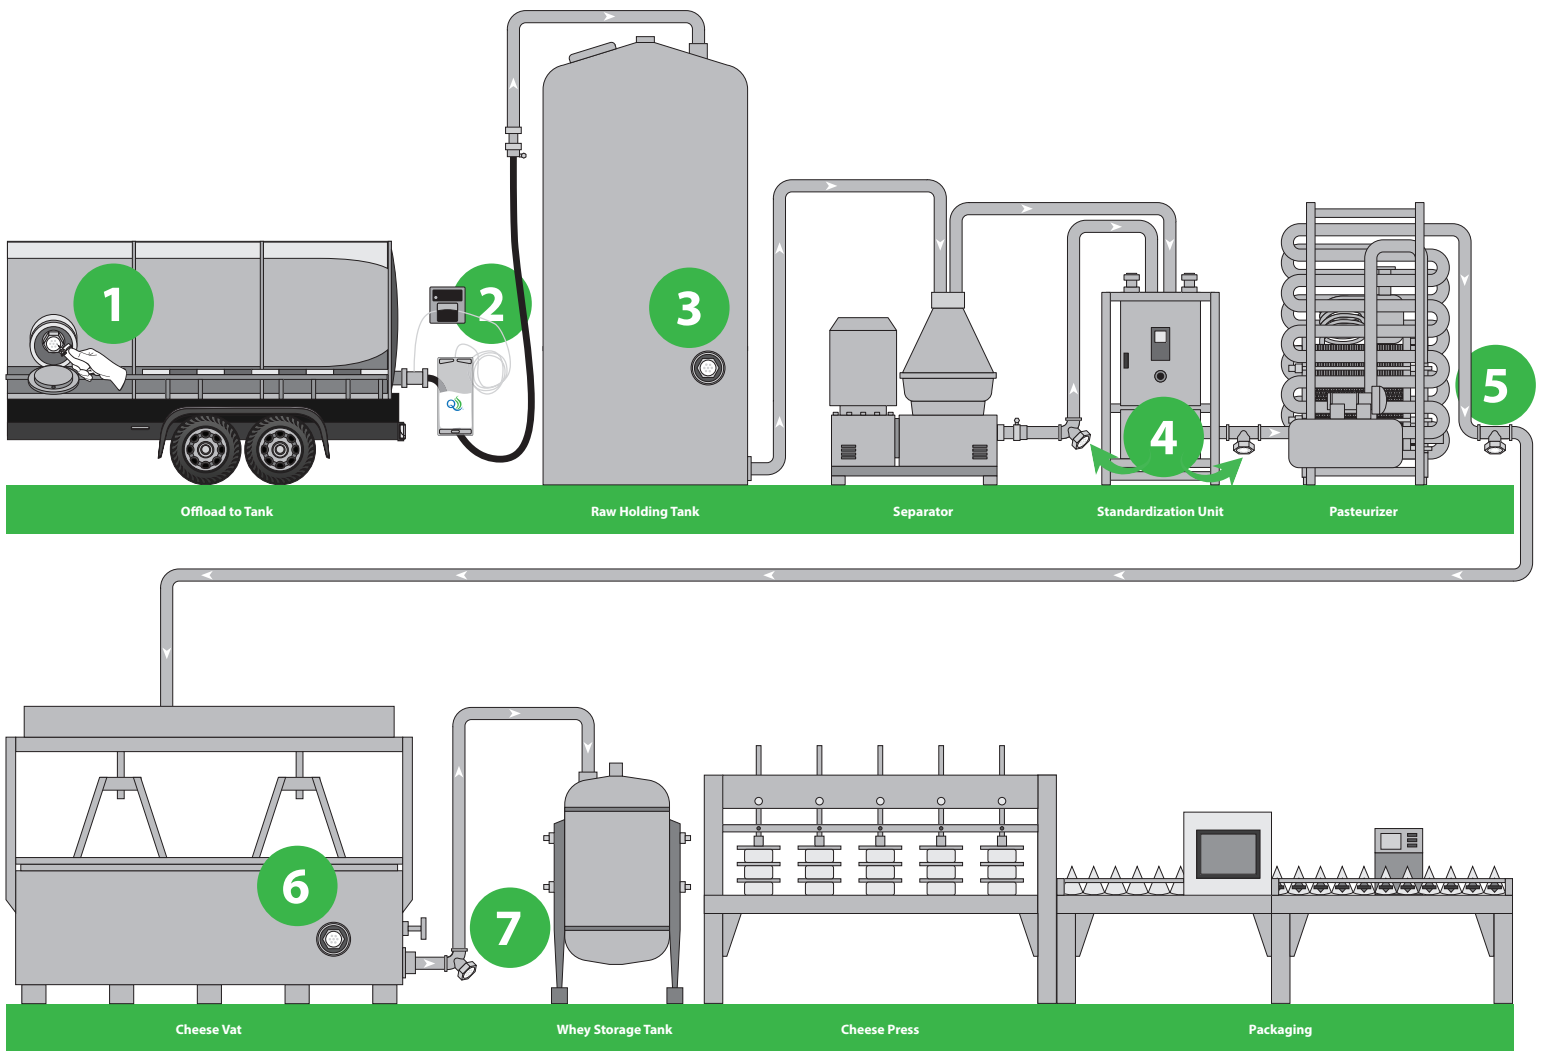

OUR SYSTEM IS AS EASY AS  
**1-2-3-4!**



# TRAINING & SUPPORT: DAIRY PROCESSOR: CHEESE



## APPLICATION SITES

- 1 Milk Tanker Truck Sampling**  
Install via a QualiTru Sanitary Recessed Port with Security Lid, an official Pasteurized Milk Ordinance (PMO) Appendix N (antibiotic) sample can be obtained at the processing plant without the need to climb to the top of the milk tanker truck, assuring a safer physical sampling environment for certified samplers.
- 2 Receiving Bag Sampling**  
Install at the outlet valve on a tanker truck via a beveled seat QualiTru TruStream Sanitary Port. A representative sample of the milk in the milk tanker truck can be collected via a peristaltic pump and sterile collection bag as the truck is being unloaded in the receiving bay.
- 3 Raw Product Sampling**  
Install a QualiTru TruStream Sanitary Recessed Port in the raw receiving silo for regulatory or milk quality samples.
- 4 System Diagnostic**  
Install a QualiTru TruStream Sanitary Port at any location throughout your fluid path as part of the diagnostic function, system quality check, Clean in Place (CIP) cleanliness check and overall milk quality samples.
- 5 Post-Pasteurization Monitoring**  
Install a QualiTru TruStream Sanitary Port on the backside of the pasteurizer to monitor post-pasteurization contamination and to verify pasteurization effectiveness and efficiency. Can also be part of the diagnostic function, system quality check, CIP cleanliness check and overall milk quality samples.
- 6 Inoculating**  
Install via a QualiTru TruStream Sanitary Tank Port or Recessed Port on the exterior of the vat, this allows access to inoculate the milk with the specific cultures while still keeping the system closed from the environment. This unique approach helps to mitigate the risk of unwanted microorganisms from entering the vat and contaminating the product.
- 7 Milk Tanker Truck Sampling**  
Install a QualiTru TruStream Sanitary Port off the vat outlet valve and prior to the whey storage tank or silo for regulatory or quality samples. Whey filtration sampling is used primarily for process monitoring/solid analysis.

**Leaders in the  
science of aseptic and  
representative sampling**