



QUALITRU

SAMPLING SYSTEMS

TRUStream3

NPS DRUM SAMPLING CAP

Eliminate the Risks. Sample with Confidence.

The TruStream3 NPS Drum Sampling Cap offers a quick and easy method to assess product quality and composition without exposing the product to airborne contaminants. Designed to replace a standard NPS bung plug, the TruStream3 NPS Drum Sampling Cap has been engineered to easily enable sampling of drum contents through the integrated septum.

Features of our TruStream3 NPS Drum Sampling Cap

Three-Channel Septum: Integrated septum supports three hygienic samples per drum.

Wipeable, Visual Plastic Membrane: Protective plastic membrane covers all channels and indicates used channels.

Application Versatility: Designed for sampling liquid food ingredients including: syrups, organic oils, fats, dairy, fermented beverages, and other organic liquid products.*

Traceability Support: Enables testing, chain of custody, and documentation compliance.

Benefits of our TruStream3 NPS Drum Sampling Cap

Saves Time: No need to remove drum caps for each sample.


Protects Product Integrity: Non-invasive sampling reduces exposure to oxygen, moisture, yeast, mold, and bacteria.

Supports Quality Assurance Systems: Enables proactive quality assurance to minimize risks of recalls or spoilage.


Compliant and Safe: Manufactured from FDA food contact-compliant materials, BPA-free, and Phthalate-free.

*Contact QualiTru for product compatibility information.


Sample Quickly. Sample Hygienically. Three Easy Steps.

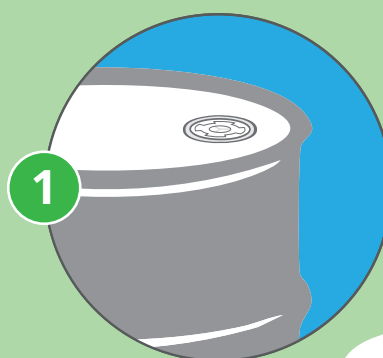

1
Replace the standard NPS bung plug on drum with the TruStream3 NPS Drum Sampling Cap.

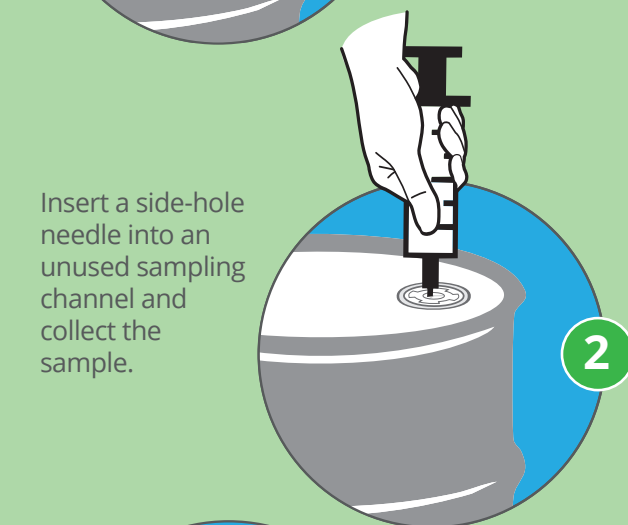

2
Insert a side-hole needle into an unused sampling channel and collect the sample.

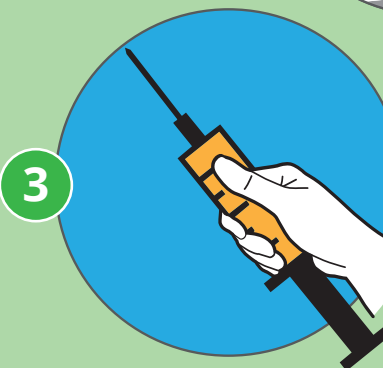

3
Prepare the sample for testing, chain of custody, and compliance documentation.

Call today to learn more or visit our website at [QualiTru.com](https://www.QualiTru.com)